MAXHUB

SIMPLE USER GUIDE

MAXHUB EDUCATION SERIES

INTERACTIVE FLAT PANEL

1.0 Panel Operation & Status

The Power button is located at the middle of the Panel's bottom bezel

Colour Indicator & Status

Red	Panel is **OFF**
White	Panel is **ON** and in operation
White (Flashing)	Panel is in **SLEEP** mode

To Operate the Panel

Turning On the Panel	Panel in **Off** mode, press the Power Button once.
Turning Off the Panel	Panel in **On** mode, press and hold the Power Button until the Switch Off prompt appears – you can tap the Off Button to turn off the panel immediately, or wait 10 seconds for the machine to turn off by itself.
Panel into Sleep Mode	Panel in **On** mode, tap the Power Button once.

2.0 Home Page & Taskbar

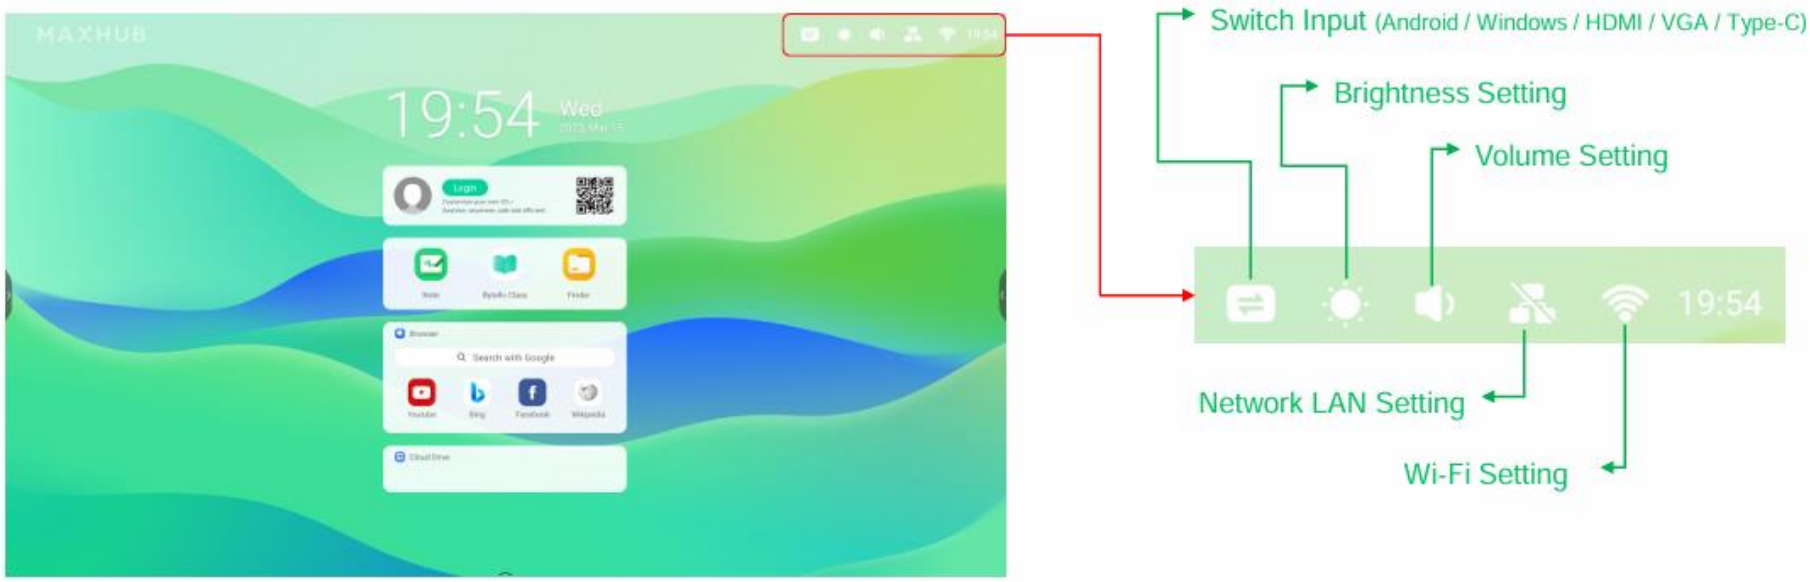

Taskbar options (available at 3 sides of panel)

3.0 Maxhub Connect – Wireless Projection

Download the **Maxhub Connect** software/application in your laptop/mobile phone.

Download Link

connect.maxhub.com/downloads

Windows & Mac OS

1. Connect to the same network as IFP (or connect to hotspot that generated by IFP)
2. Run MAXHUB Connect at windows → Input 6 digit that shown in IFP Display

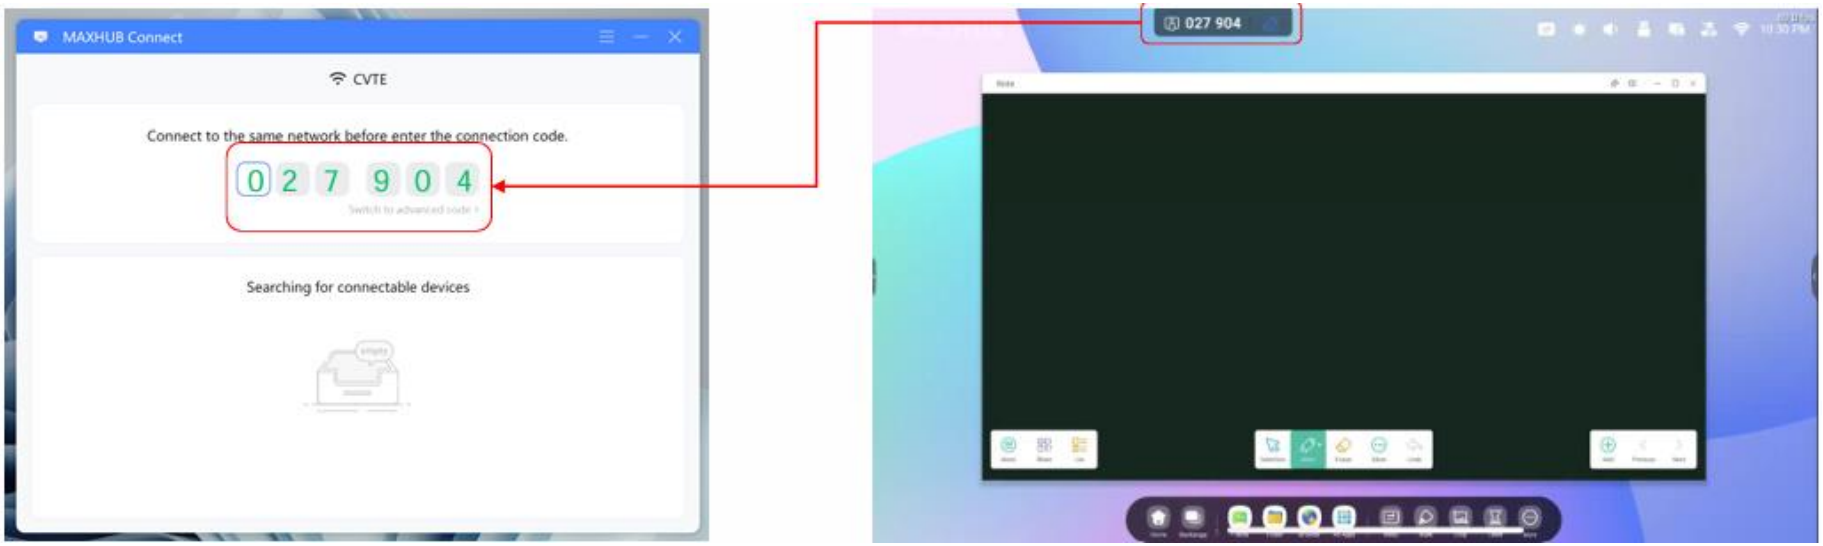

3. **Screen Share** → to push Laptop/PC Screen to IFP or,
4. **Desktop Sync** → to push IFP Screen to Laptop/PC

Press **Start** under Screen Share to cast your laptop to the IFP. Then, choose if you want to duplicate or extend your laptop, press **Mirror**.

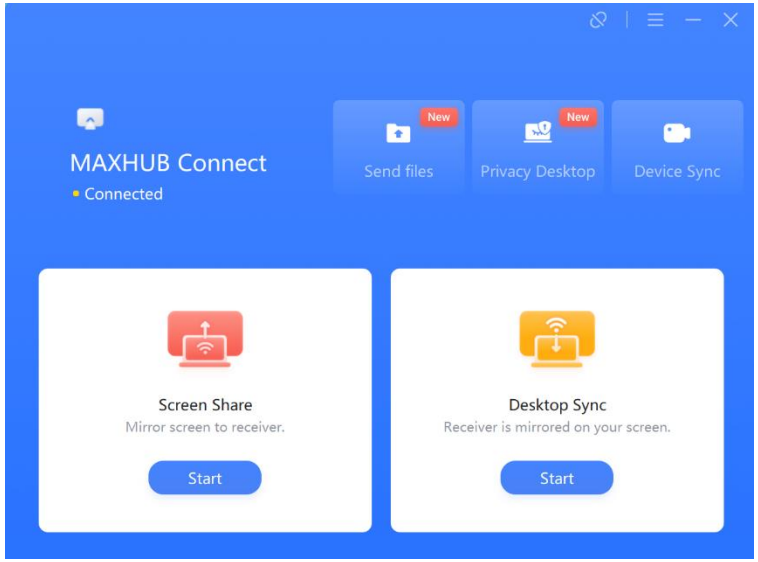

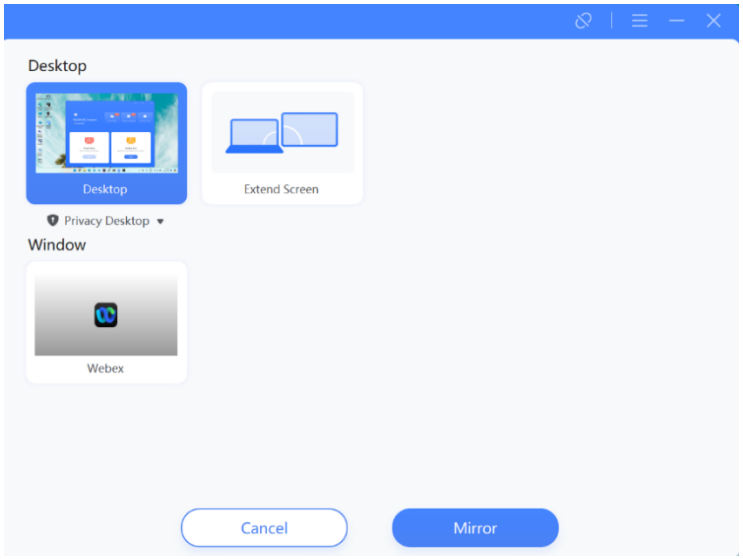

Ensure touch option is enabled to control the laptop on the IFP. Click “Close” to stop casting.

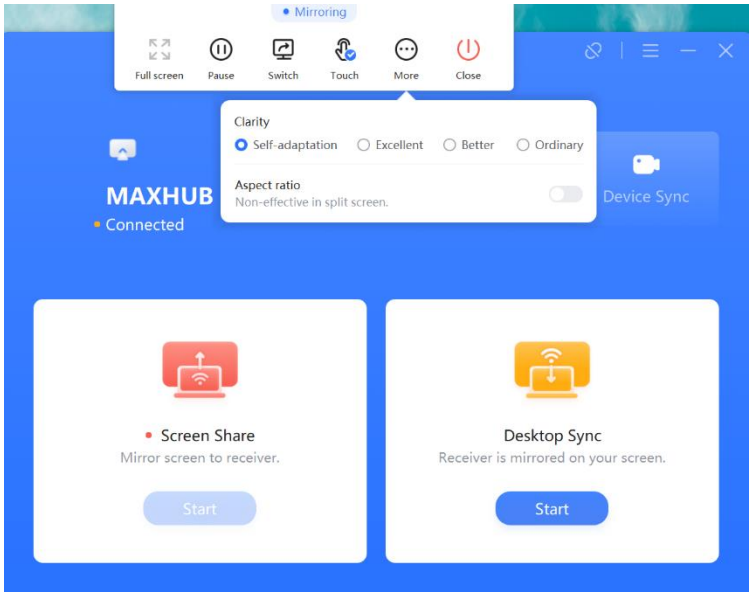

Android & iOS

1. Connect to the same network as IFP (or connect to hotspot that generated by IFP)
2. Run MAXHUB Connect at mobile phone → Input 6 digit that shown in IFP Display

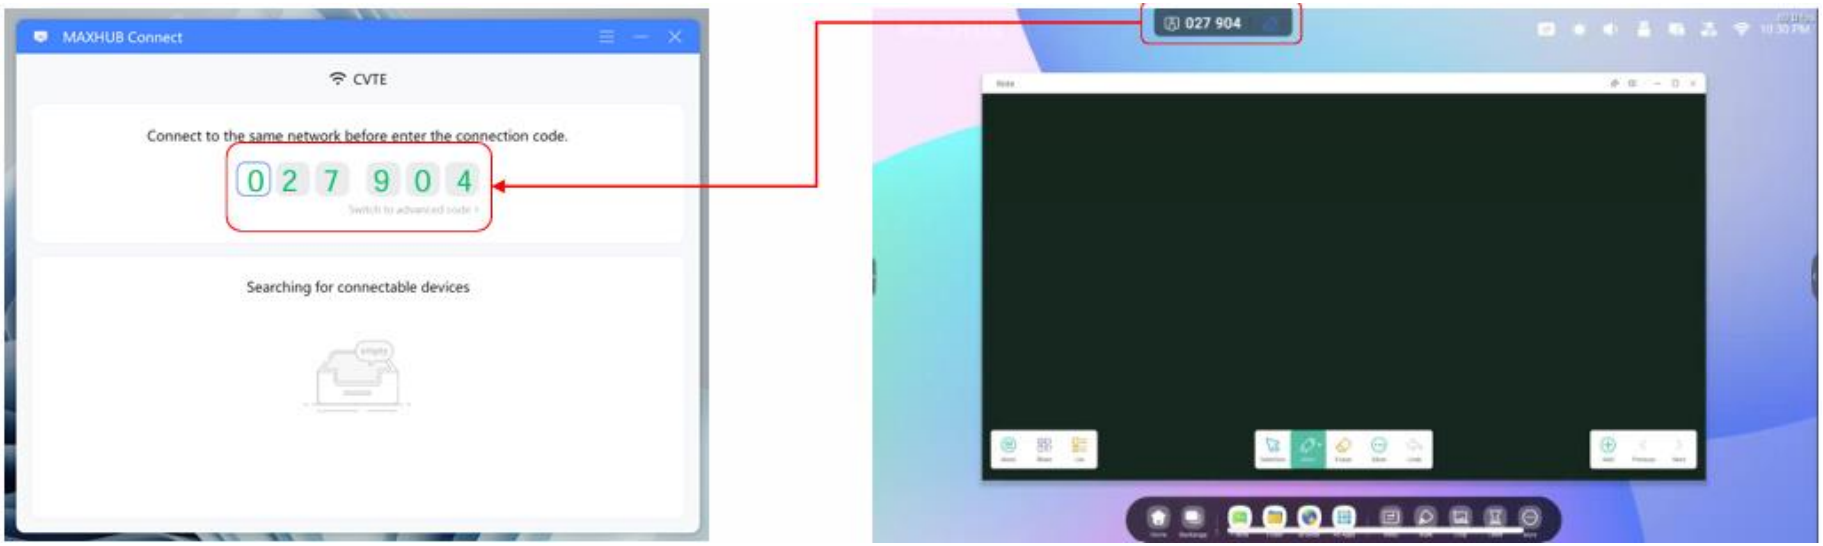

Maxhub Connect GUI page for mobile phone.

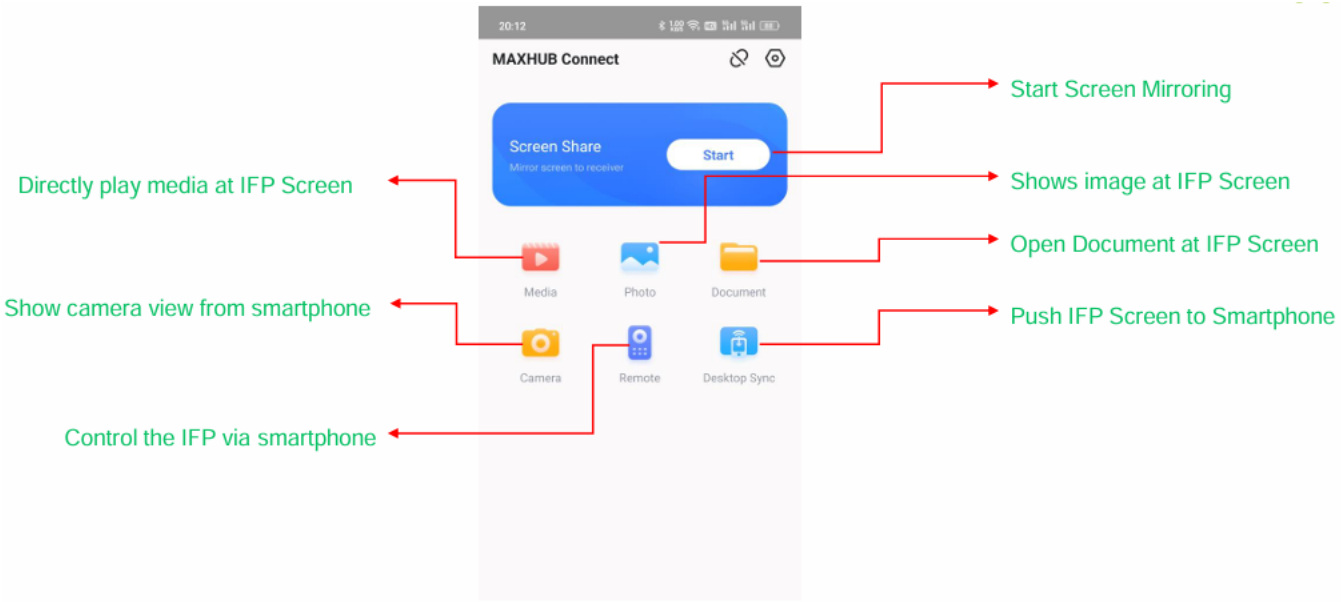

4.0 Broadcasting

Set Desired Panel as Main Screen

For example scenario, we have chosen MH L4-R03 as main screen, and MH L4-R02 & MH L4-R04 as second screens.

1. At MH L4-R03 IFP, Press the floating window at the top screen / press Maxhub connect at taskbar > Press “View the main interface.”
2. Press Menu > Screen Group
3. Choose Set Main Screen

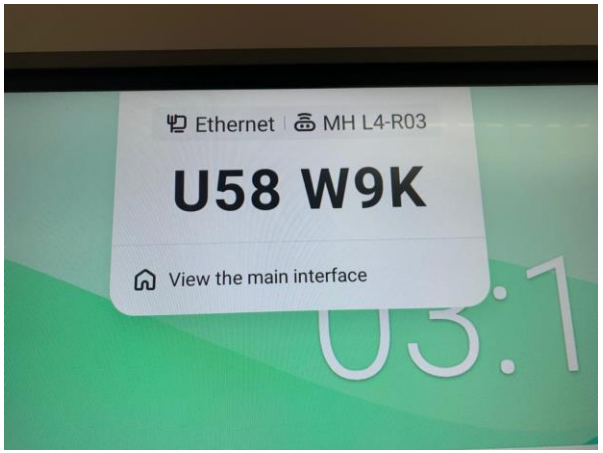

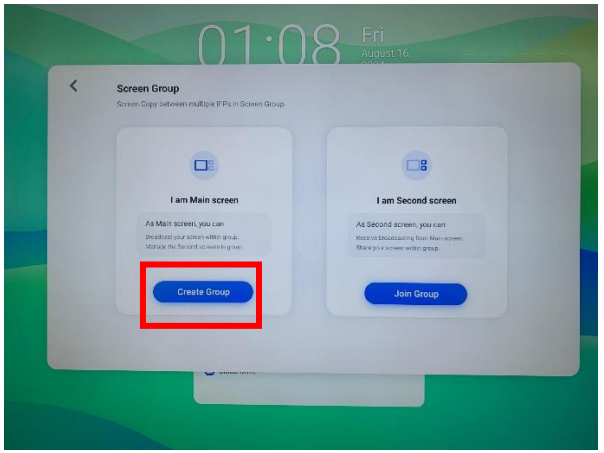

Set MH L4-R02 & L4-R04 IFP as Second Screen

1. At each individual MH L4-R02 & R04 IFP, press the floating window > Press “View the main interface.”
2. Press Menu > Screen Group
3. Under option 2, Press “Connect and Join” to join the MH L4-R03.

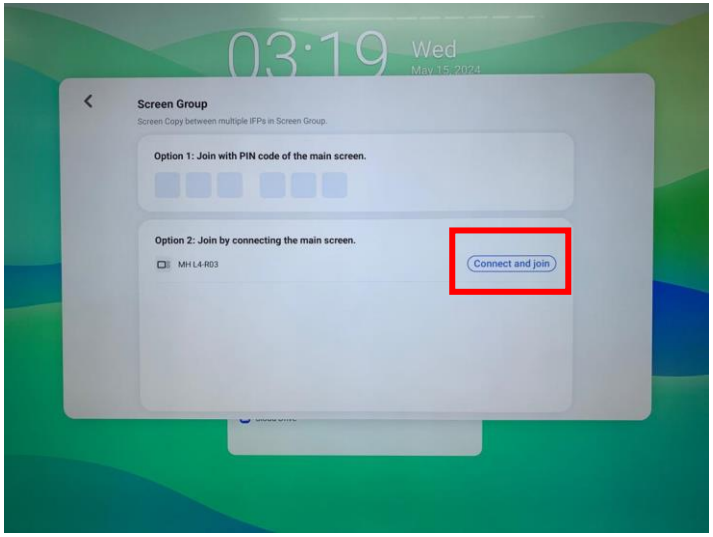

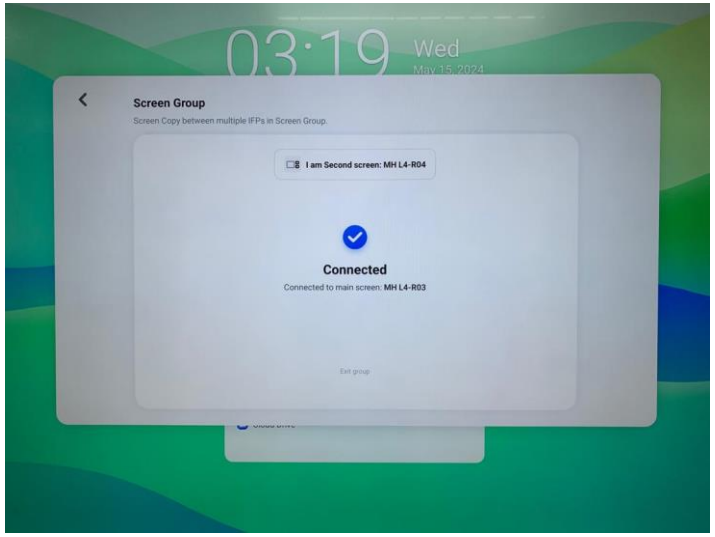
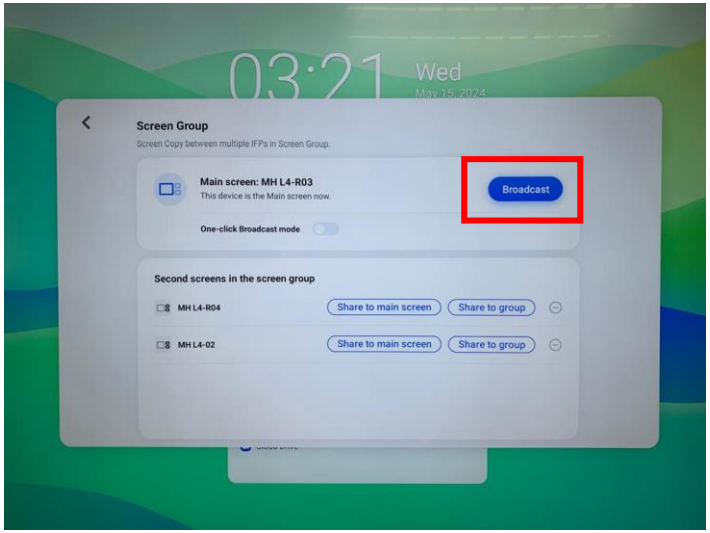
4. Once MH L4-R02 & MH L4-R04 IFPs are joined to MH L4-R03, click Broadcast at MH L4-R03 IFP to duplicate the screen from Room 3 IFP to Room 2 & Room 4 IFPs.